



<b>Item#</b>	<b>Illus.#</b>	<b>Description</b>
121051	0001	SCREW,SHCS,M4X0.70X20
120997	0002	CAP,FRAME
113337	0003	SEAL,FRAME/CAP
160186	0004	SEAL,TOP
160187	0005	HOLD DOWN,HEADVALVE
101058	0006	O-RING,1.487X.103
120989	0007	SEAL,INSERT
120991	0008	SPRING,HEADVALVE
120032	0009	INSERT,HEADVALVE
120027	0010	DIAPHRAM,HEAD VALVE
121007	0011	SLEEVE,CYLINDER
RG161210	0012	O-RING,1.612X.103 NBR
120061	0013	SEAL,CHECK
S32109	0014	RING,PISTON
120078	0015	ASSEMBLY,PISTON/DRIVER
120063	0016	BUMPER,DRIVE
121017	0017	GUIDE,DRIVER
121004	0018	FRAME,OVERMOLD
121035	0019	SEAL,FRAME END CAP
166057	0020	ASSEMBLY,END CAP
121032	0021	DEFLECTOR,CAP END
PW8	0022	WASHER,PWR,.188
124496	0023	LABEL,BT125
121052	0024	SCREW,SHCS,M4X0.70X25
MSC4070-8	0025	SCREW,SHCS,M4X0.70X8
120030	0026	COVER,TRIP
113698	0027	NOSE,BT125
120098	0028	PLATE,DRIVER
N86115	0029	COMPRESSION SPRING
100298	0030	PIN,SPIRAL M3X30
MHE4070-100	0031	ELASTIC STOP NUT,M4
121045	0032	LABEL,FASTENER SPECS
S32011	0033	INSERT,M4
113511	0034	MAGAZINE,FIXED
121036	0035	KEY,HEXAGON 3MM
121009	0036	CORE TIP,FIXED
121029	0037	STEM,VALVE
MRG002514	0038	O-RING,.098X.055
850144	0039	O-RING,.614X.070
121005	0040	HOUSING,VALVE
121024	0041	SPRING,TRIP
120022	0042	TRIP,UPPER
124925	0043	ASSEMBLY,LOWER ARM
120024	0044	THUMBWHEEL
120056	0045	CONTACT FOOT,NO MAR
120020	0046	GUIDE,ARM
113515	0047	CORE,PLATE
113551	0048	PUSHER
113550	0049	SHUTTLE,PUSHER
120051	0050	PLATE,WEAR
121010	0051	MAGNET
121012	0052	SPRING,PUSHER
113569	0053	STOP,LATCH
113512	0054	MAGAZINE
158612	0055	LABEL,WARNING
MPP030020	0056	PIN,SPIRAL M3X20MM

113572	0057	BUMPER,REAR
113579	0058	SPRING,LATCH
113567	0059	LATCH
113568	0060	LATCH,COVER
CNTK1	0061	KIT,CONTACT TRIP CONVERSION
SEQ4	0062	KIT,SEQUENTIAL TRIP CONVE
100387	0063	SPRING,COMPRESSION
142961	0064	LABEL,MAGNESIUM
158613	0065	LABEL,WARNING NO C.T.
121008	0066	STOP,TRIGGER
121013	0067	PLUG,COVER
159884	0068	ASSEMBLY,SECOND TRIGGER