


# SB-1850BN

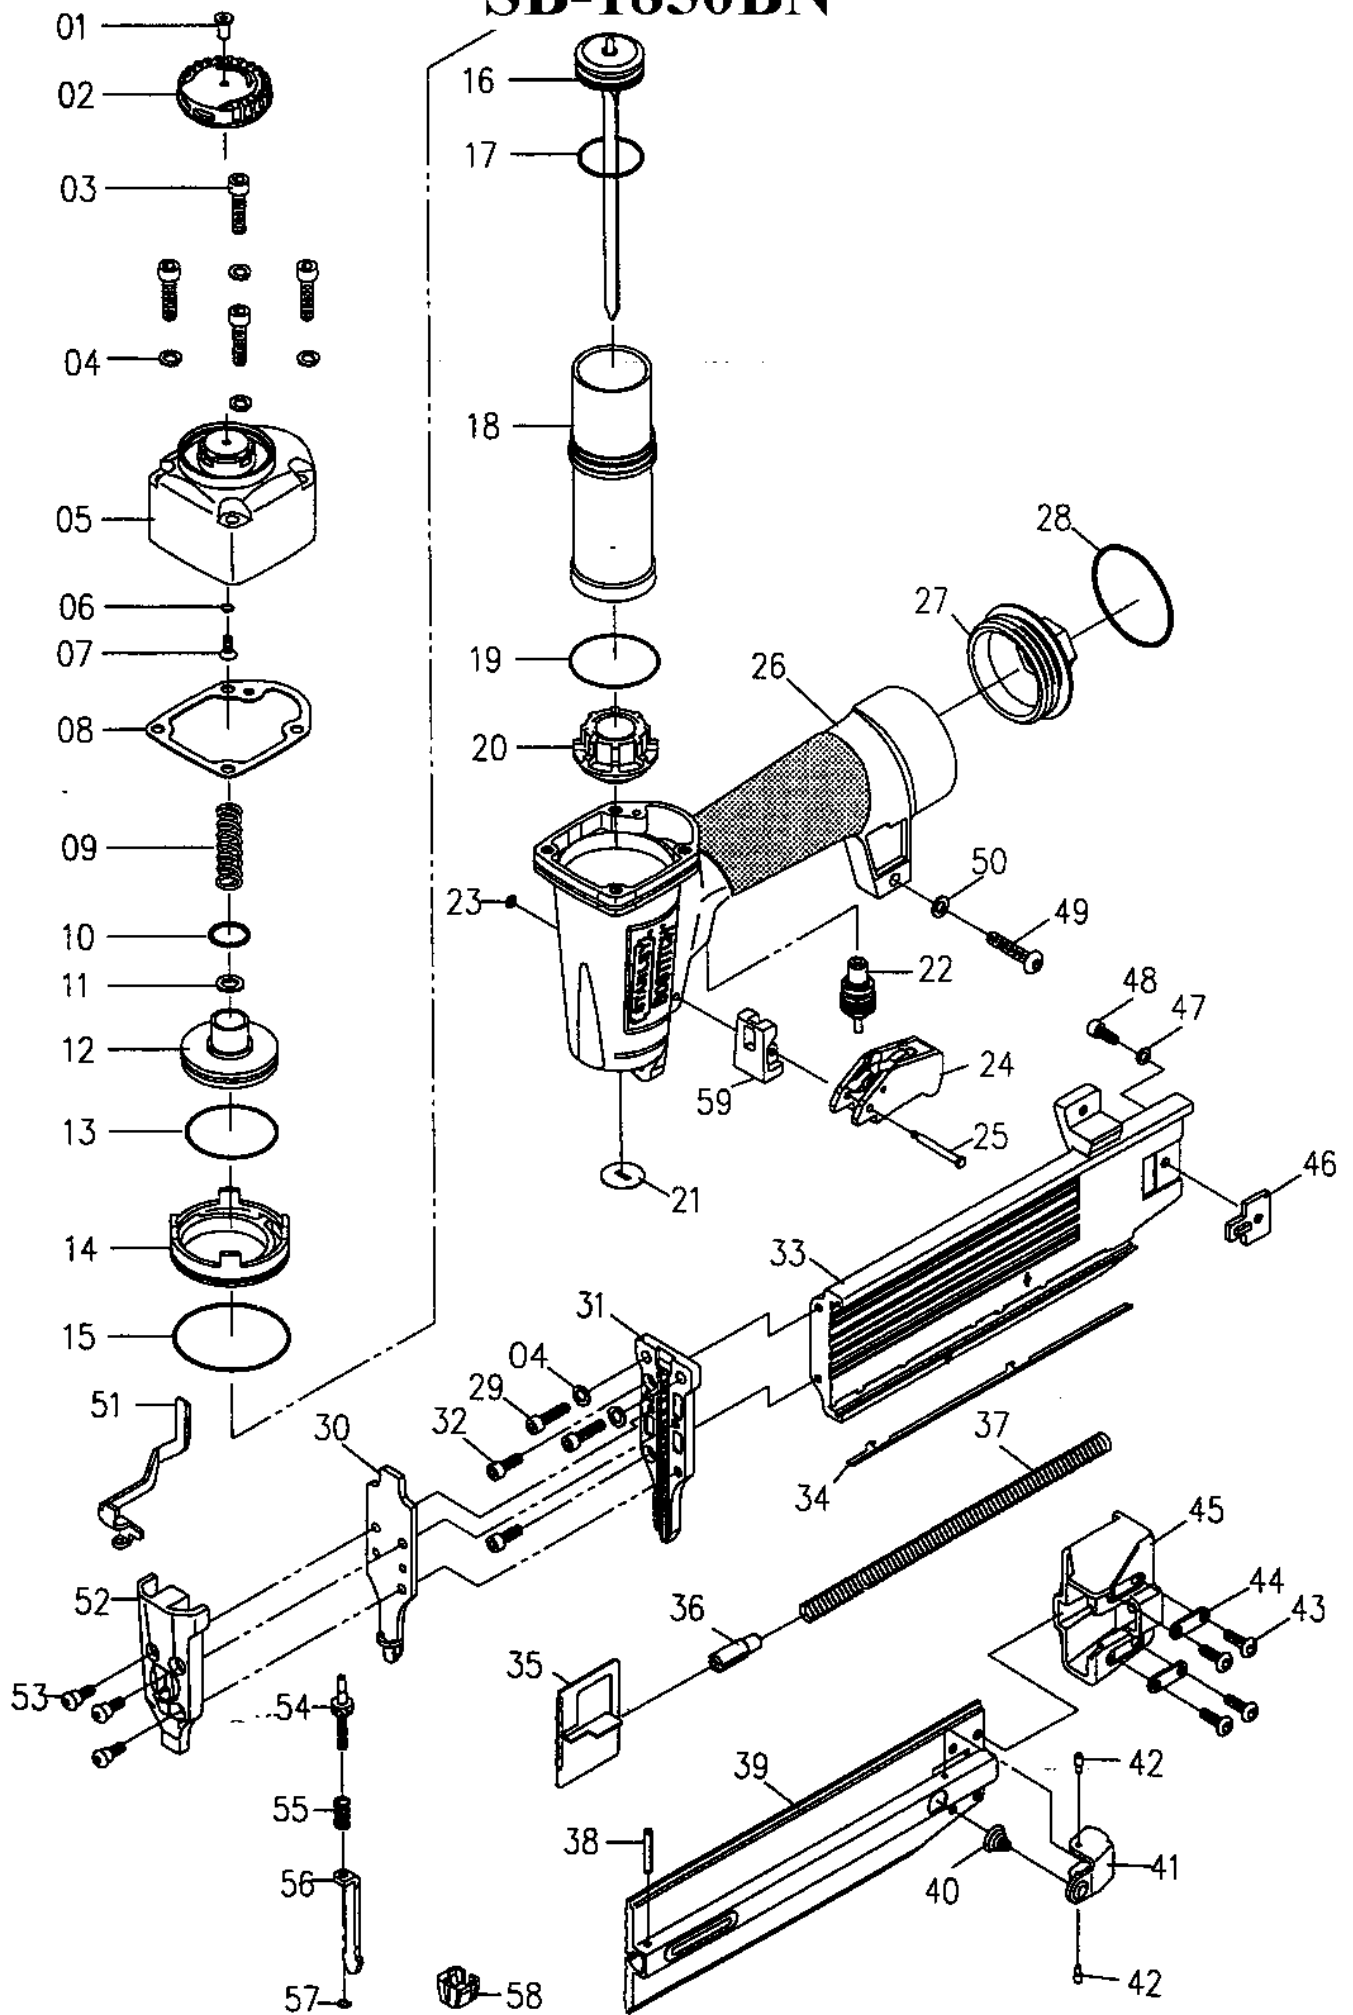

<b>Item#</b>	<b>Illus.#</b>	<b>Description</b>
JA1191W1	0001	FLANGE NUT
JA1162E1	0002	EXHAUST COVER
1A105401	0003	HEX SOC.HD.BOLT
S2710525100	0004	HEX.SOC.HD.BOLT
JS1133D1	0005	DEFLECTOR
1FS0003	0006	O-RING
1L103061	0007	BUTTON HD.CROSS SOC.SCREW
JA1151C1	0008	PACKING
JA1041S1	0009	SPRING
1FP0015	0010	O-RING
S05106101000	0011	FLAT WASHER
JA1052E1	0012	HD.VALVE PISTON
1FS0034	0013	O-RING
JA1092E1	0014	COLLAR
S06A003100	0015	O-RING
JS1082U1	0016	DRIVER UNIT
1FZ0009	0017	O-RING
JS1101W1	0018	CYLINDER
1FA0026	0019	O-RING
JA1111O1	0020	BUMPER
JS1121I1	0021	JOINT GUIDE
FA205BA1	0022	TRIGGER VALVE UNIT
S06A010300	0023	O-RING
G1300900	0024	TRIGGER UNIT
P0595201662	0025	STEPPED PIN
JA3401A1	0026	GUN BODY UNIT
JA3612D1	0027	END CAP
1FZ0019	0028	O-RING
S0110520100	0029	HEX SOC.HD.BOLT
JS4013M1	0030	DRIVER GUIDE COVER A
JS4033H1	0031	DRIVER GUIDE
1A104161	0032	HEX SOC.HD.BOLT
JS4105D1	0033	MAGAZINE A
JA4061I1	0034	NAIL GUIDE
JS4091I1	0035	PUSHER
JA4172E1	0036	ROLLER
JA4141S1	0037	SPRING
1H03012	0038	SPRING PIN
JS4043J1	0039	MAGAZINE B
JA4191S1	0040	SPRING
JA4201I1	0041	CLICK LEVER
JA4181W1	0042	CLICK LEVER PIN
1L104103	0043	BUTTON HD.SOC.SCREW
JA4501I1	0044	END COVER PLATE
JS4261E1	0045	END COVER
JS4211I1	0046	REAR PLATE
1D104	0047	SPRING WASHER
1A104061	0048	HEX SOC.HD.BOLT
1L105201	0049	BUTTON HD.SOC.SCREW
1E10510	0050	FLAT WASHER
JA5073I1	0051	SAFETY B
JS5082E1	0052	SAFETY COVER
JA5131I1	0053	SHOULDER SCREW
JA5161W1	0054	SETTING KNOB
JA5092S1	0055	SPRING
JS5062I1	0056	SAFETY A
1I1020	0057	E-RING
JA5101E1	0058	SAFETY PAD
JA5141E1	0059	SAFETY GUIDE