


# MODELS: TR313 TR315

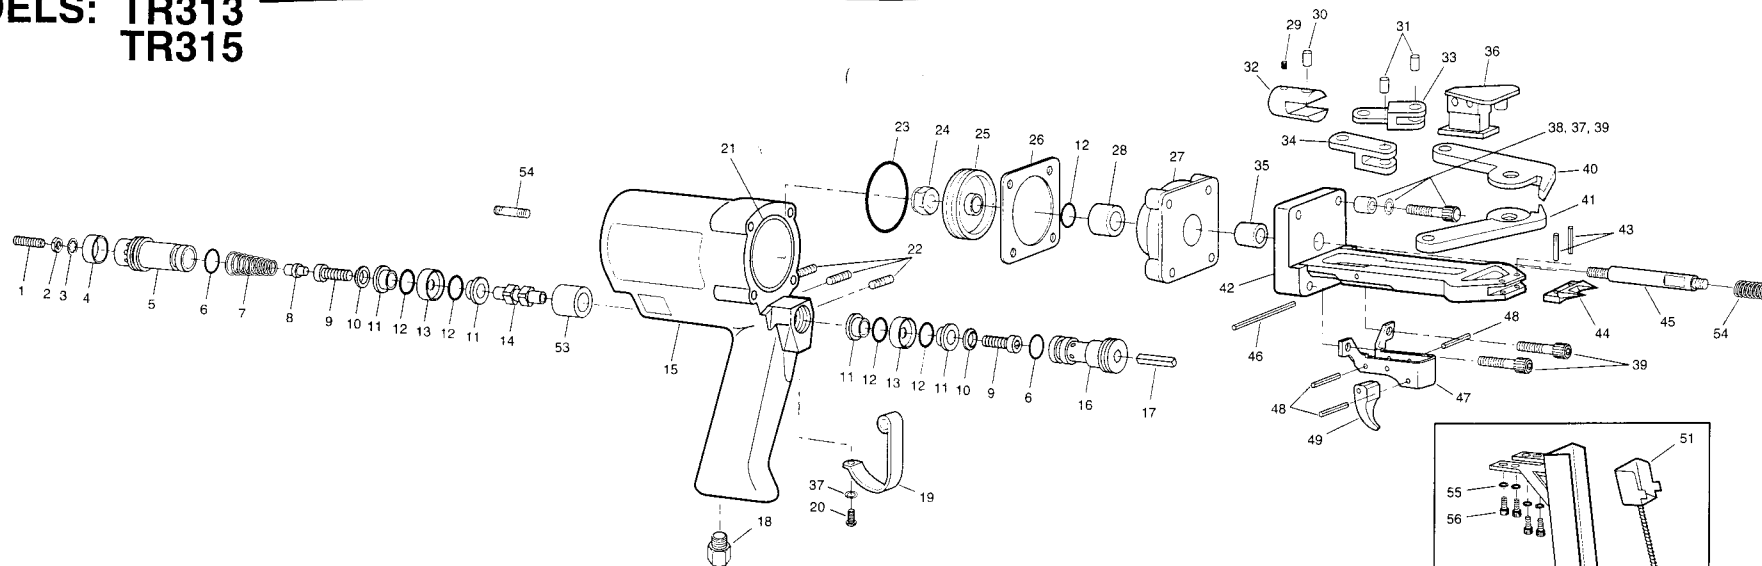


## TR-313 (standard magazine) PARTS LIST

Item	Description	Part No.	Item	Description	Part No.
1	Set Screw	SC25	31	Roll Pin (2)	TR105020
2	Jam Nut	SC15	32	Clevis	TR309032F
3	Lock Washer	SC28	33	Left Arm Link	TR309033F
4	Air Deflector	BO1426	34	Right Arm Link	TR309034F
5	Rear Valve Seat	BO3043	35	Carriage Bearing	TR309035
6	"O" Ring	SC09	36	Slide	TR309036F
7	Throttle Spring	BO1419	37	Lock Washer (5)	SC32
8	Spring Locator	BO1420	38	Spacer (2)	TR309038F
9	Throttle Valve Screw (2)	SC21	39	Socket Head Cap Screw (4)	SC39
10	Valve Screw Washer (2)	BO1455	40	Left Jaw	TR309040F
11	"O" Ring Support (2)	BO1421	41	Right Jaw	TR309041F
12	"O" Ring (5)	SC08	42	Carriage Assembly (includes 35)	TR417042F
13	"O" Ring Center Support (2)	BO1422	43	Roll Pin (2)	TR105026
14	Throttle Valve Spacer	BO3044	44	Teeth (straight)	TR105025F
15	Housing (Assembly) (includes 21, 22, 53, 54)	TR313015AF	44C	Teeth (curved)	TR105025CF
16	Front Valve Seat	BO3042	45	Piston Rod	TR309045
17	Throttle Stem	BO1425F	46	Stop Pin	SC40
18	Inlet Bushing Assembly	BO1473F	47	Trigger Guard Bracket	TR309047F
19	Trigger Guard	BO1435F	48	Roll Pin (3)	SC05
20	Button Head Screw	SC18	49	Trigger	AO2073F
21	Liner	BO1413	50	Magazine Assembly	TR417051F
22	Set Screw	SC23	51	Pusher Assembly	TR105027F
23	Piston "O" Ring	SC10	53	Throttle Valve Bushing	BO1417
24	Nut	SC13	54	Compression Spring	TR313056
25	Piston	BO1414F	55	Lock Washer	TL726000
26	Gasket	BO1443	56	Socket Head Cap Screw	TL716206
27	Piston Stop Assembly (includes 12, 28)	TR309027			
28	Piston Rod Bushing	BO1858			
29	Set Screw	TR105015			
30	Roll Pin	SC36			

## TR-315 (long magazine) UNIQUE PARTS LIST

50	Magazine Assembly	TR419051F
51	Pusher Assembly	TR107027F

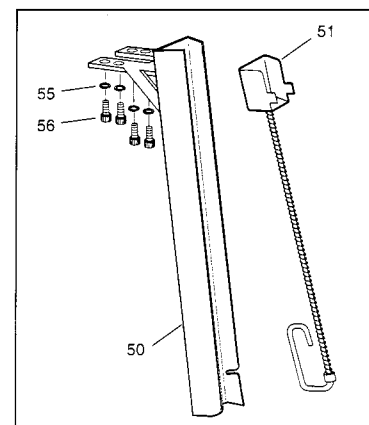

TR315 (Extended Magazine)

