


MODEL TS3832

SPOTNAILS®

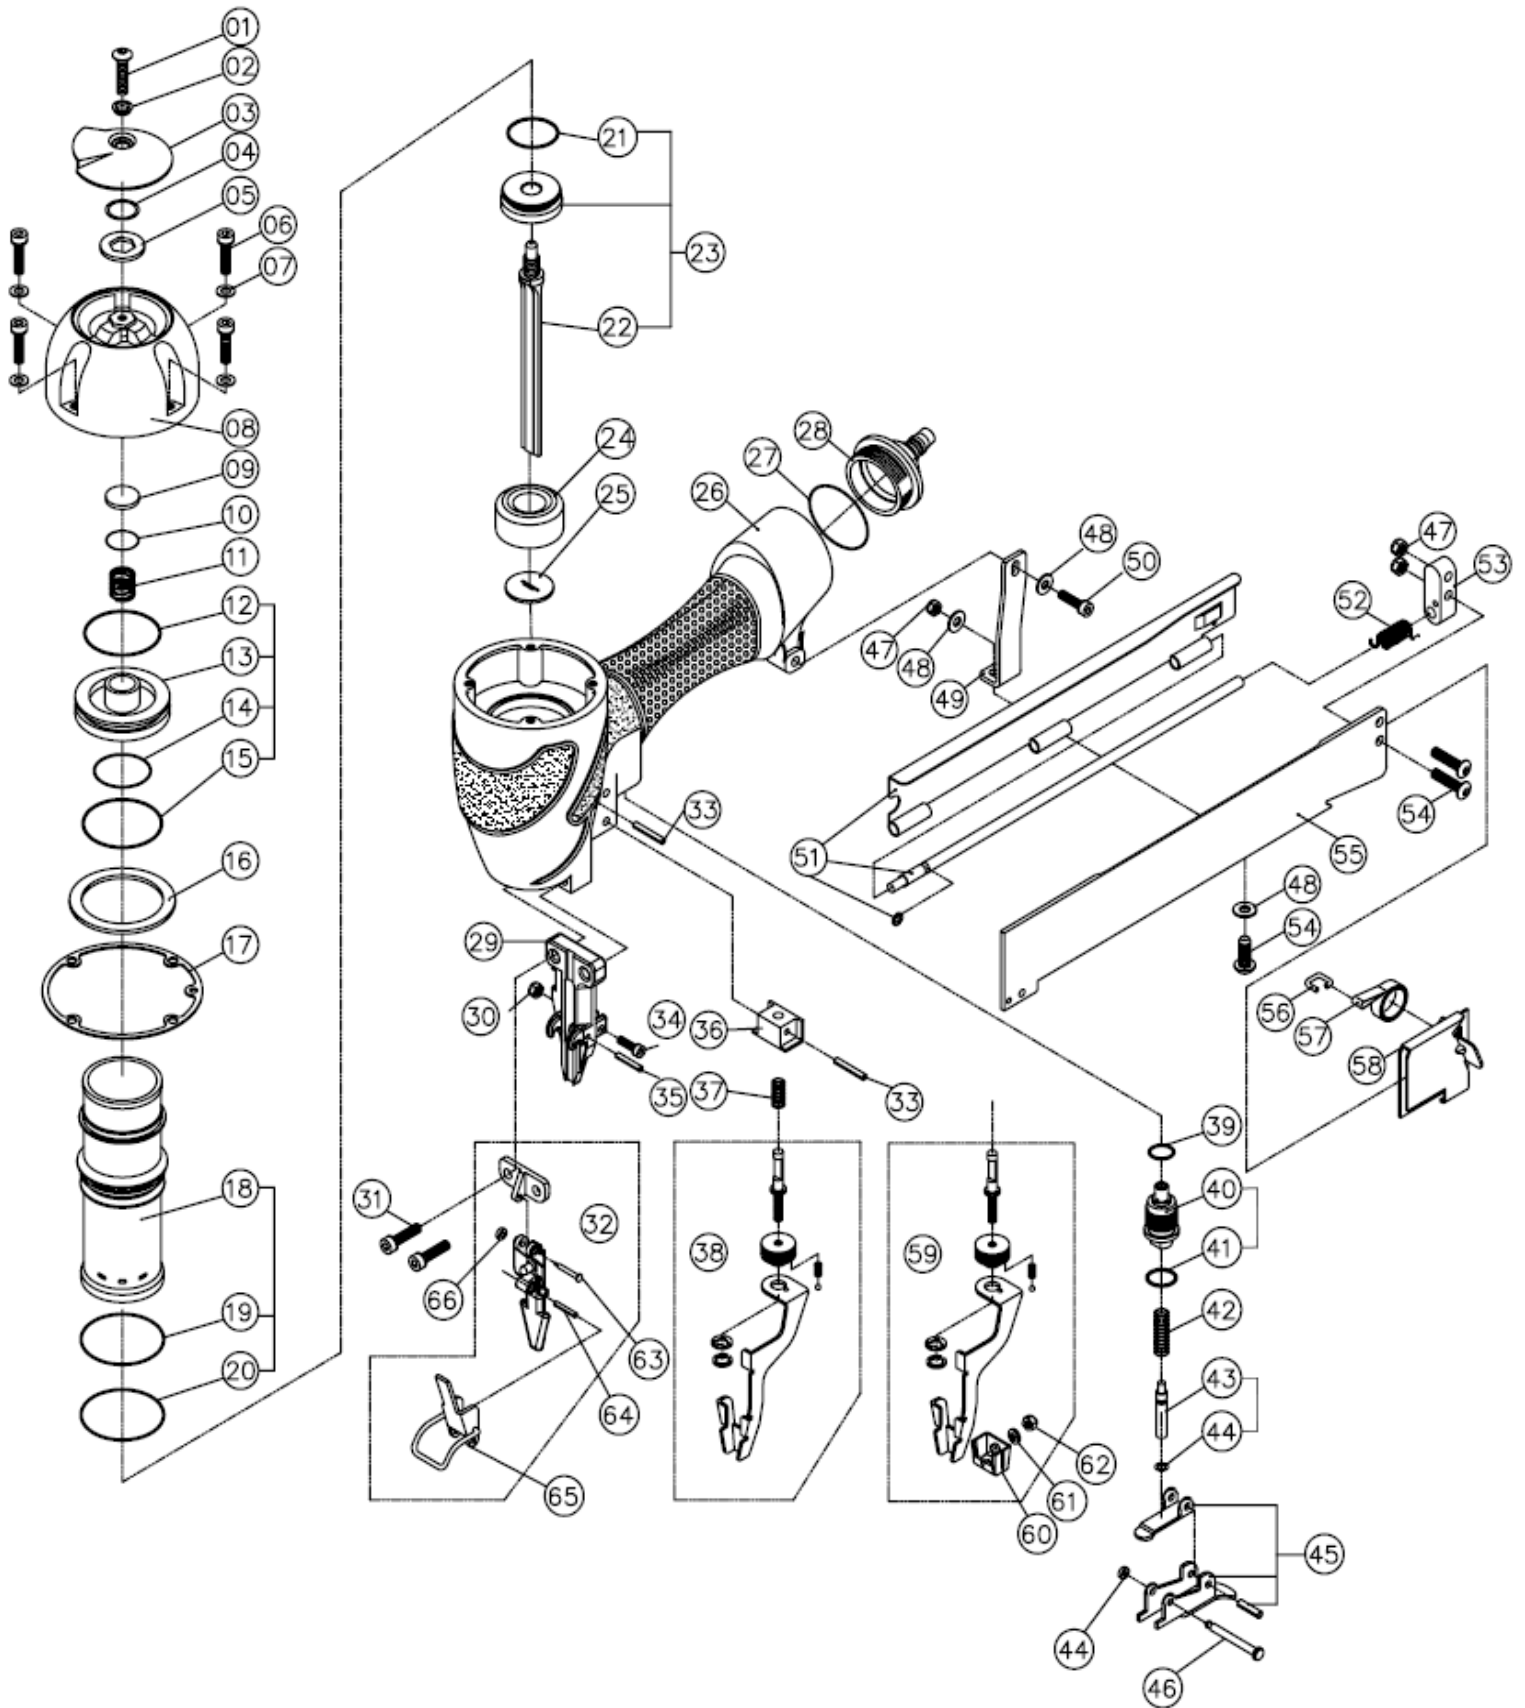

SPOTNAILS MODEL TS3832

Ref No.	Part No.	Description
01	P-24370	Screw
02	P-96118	Bushing
03	P-70046	Exhaust Deflector
04	P-64377	O-Ring
05	P-32217	Washer
06	P-24358	Cap Screw
07	P-32211	Flat Washer
08	P-60180	Cap
◆	09	P-15193 Exhaust Seal
◆	10	P-64384 O-Ring
◆	11	P-18331 Poppet Spring
◆	12	P-64232 Poppet O-Ring
◆	13	P-63042 Poppet
◆	14	P-64422 Piston Stop O-Ring
◆	15	P-64234 Cylinder Seal O-Ring
◆	16	P-03081 Guide Spacer
◆	17	P-62079 Gasket
◆	18	P-05106 Cylinder
◆	19	P-64235 Cylinder O-Ring
◆	20	P-64423 O-Ring
◆	21	P-64424 Piston O-Ring
◆	22	P-06236 Driver Blade
◆	23	AS-06054 Piston & Driver Assembly
◆	24	P-15121 Bumper
◆	25	P-15124 Return Seal
◆	26	P-01271 Body
◆	27	P-64425 O-Ring
◆	28	P-60175 End Cap
◆	29	P-08481 Wear Plate
◆	30	P-26125 Nut
◆	31	P-24300 Screw
◆	32	AS-10051 Front Plate Assembly
◆	33	P-07262 Pin

Ref No.	Part No.	Description
34	P-24452	Screw
35	P-07290	Pin
36	P-53165	Safety Guide
37	P-18328	Spring
38	AS-53057	Safety Assembly
◆	39	P-64239 O-Ring
◆	40	P-22114 Bleeder Valve
◆	41	P-64241 O-Ring
◆	42	P-18227 Spring
◆	43	P-22179 Plunger
◆	44	P-64240 O-Ring
◆	45	AS-21014 Trigger Assembly
◆	46	P-07327 Trigger Pin
◆	47	P-26142 Nut
◆	48	P-32170 Washer
◆	49	P-13046 Bracket
◆	50	P-24307 Screw
◆	51	AS-99086 Magazine Cover Assembly
◆	52	P-18332 Spring
◆	53	P-05098 Fixed Spacer
◆	54	P-24310 Screw
◆	55	P-12352 Track
◆	56	P-18233 Spring Clip
◆	57	P-18232 Negator Spring
◆	58	P-09158 Pusher
◆	59	AS-53061 No Mar Tip Assembly
◆	60	P-96129 No Mar Tip
◆	61	P-32227 Washer
◆	62	P-26165 Nut
◆	63	P-07356 Step Pin
◆	64	P-07353 Pin
◆	65	AS-04036 Latch Assembly
◆	66	P-64434 O-Ring

◆ Parts Included In AS-97309 O-Ring And Seal Kit