

FC96EC

BOX BOTOMER

BOSTITCH®

FC96EC

BOX BOTOMER



TOOL PARTS ILLUSTRATION

ILUSTRACIÓN DE LAS PIEZAS DE LA HERRAMIENTA

ILLUSTRATION DES PIÈCES D'OUTILLAGE

⚠ WARNING:

BEFORE PERFORMING REPAIRS ON THIS TOOL, ALL OPERATORS SHOULD STUDY THIS ILLUSTRATION, AS WELL AS THE PARTS LIST AND OPERATION AND MAINTENANCE MANUAL. OPERATORS SHOULD UNDERSTAND AND FOLLOW ALL SAFETY WARNINGS AND INSTRUCTIONS. KEEP THIS ILLUSTRATION WITH THE TOOL FOR FUTURE REFERENCE. IF YOU HAVE ANY QUESTIONS, CONTACT YOUR BOSTITCH REPRESENTATIVE DISTRIBUTOR.

⚠ ADVERTENCIA:

ANTES DE LLEVAR A CABO CUALQUIER REPARACIÓN EN LA HERRAMIENTA, TODOS LOS OPERARIOS DEBERÁN ESTUDIAR ESTA ILUSTRACIÓN, ASÍ COMO LA LISTA DE PIEZAS Y EL MANUAL DE OPERACIÓN Y MANTENIMIENTO. LOS OPERARIOS DEBERÁN ENTENDER Y SEGUIR TODAS LAS ADVERTENCIAS E INSTRUCCIONES DE SEGURIDAD. CONSERVE ESTA ILUSTRACIÓN CON LA HERRAMIENTA PARA PODER CONSULTARLA EN LO FUTURO. SI TUVIERA ALGUNA PREGUNTA, PÓNGASE EN CONTACTO CON SU REPRESENTANTE O DISTRIBUIDOR DE BOSTITCH.


⚠ ATTENTION:

AVANT DE PROCÉDER À LA RÉPARATION DE CET OUTIL, LES OPÉRATEURS DOIVENT ÉTUDIER LA PRÉSENTE ILLUSTRATION AINSI QUE LA LISTE DE PIÈCES ET LE MANUEL D'INSTRUCTIONS ET D'ENTRETIEN ; ILS DOIVENT ÉGALEMENT COMPRENDRE ET OBSERVER LES CONSIGNES DE SÉCURITÉ ET LES INSTRUCTIONS. CONSERVER CETTE ILLUSTRATION AVEC L'OUTIL POUR RÉFÉRENCE FUTURE. SI VOUS AVEZ DES QUESTIONS, COMMUNIQUEZ AVEC VOTRE REPRÉSENTANT OU VOTRE DISTRIBUTEUR DE BOSTITCH.

BOSTITCH®

Stanley Fastening Systems L.P.

FC96EC
BOX BOTTOMER

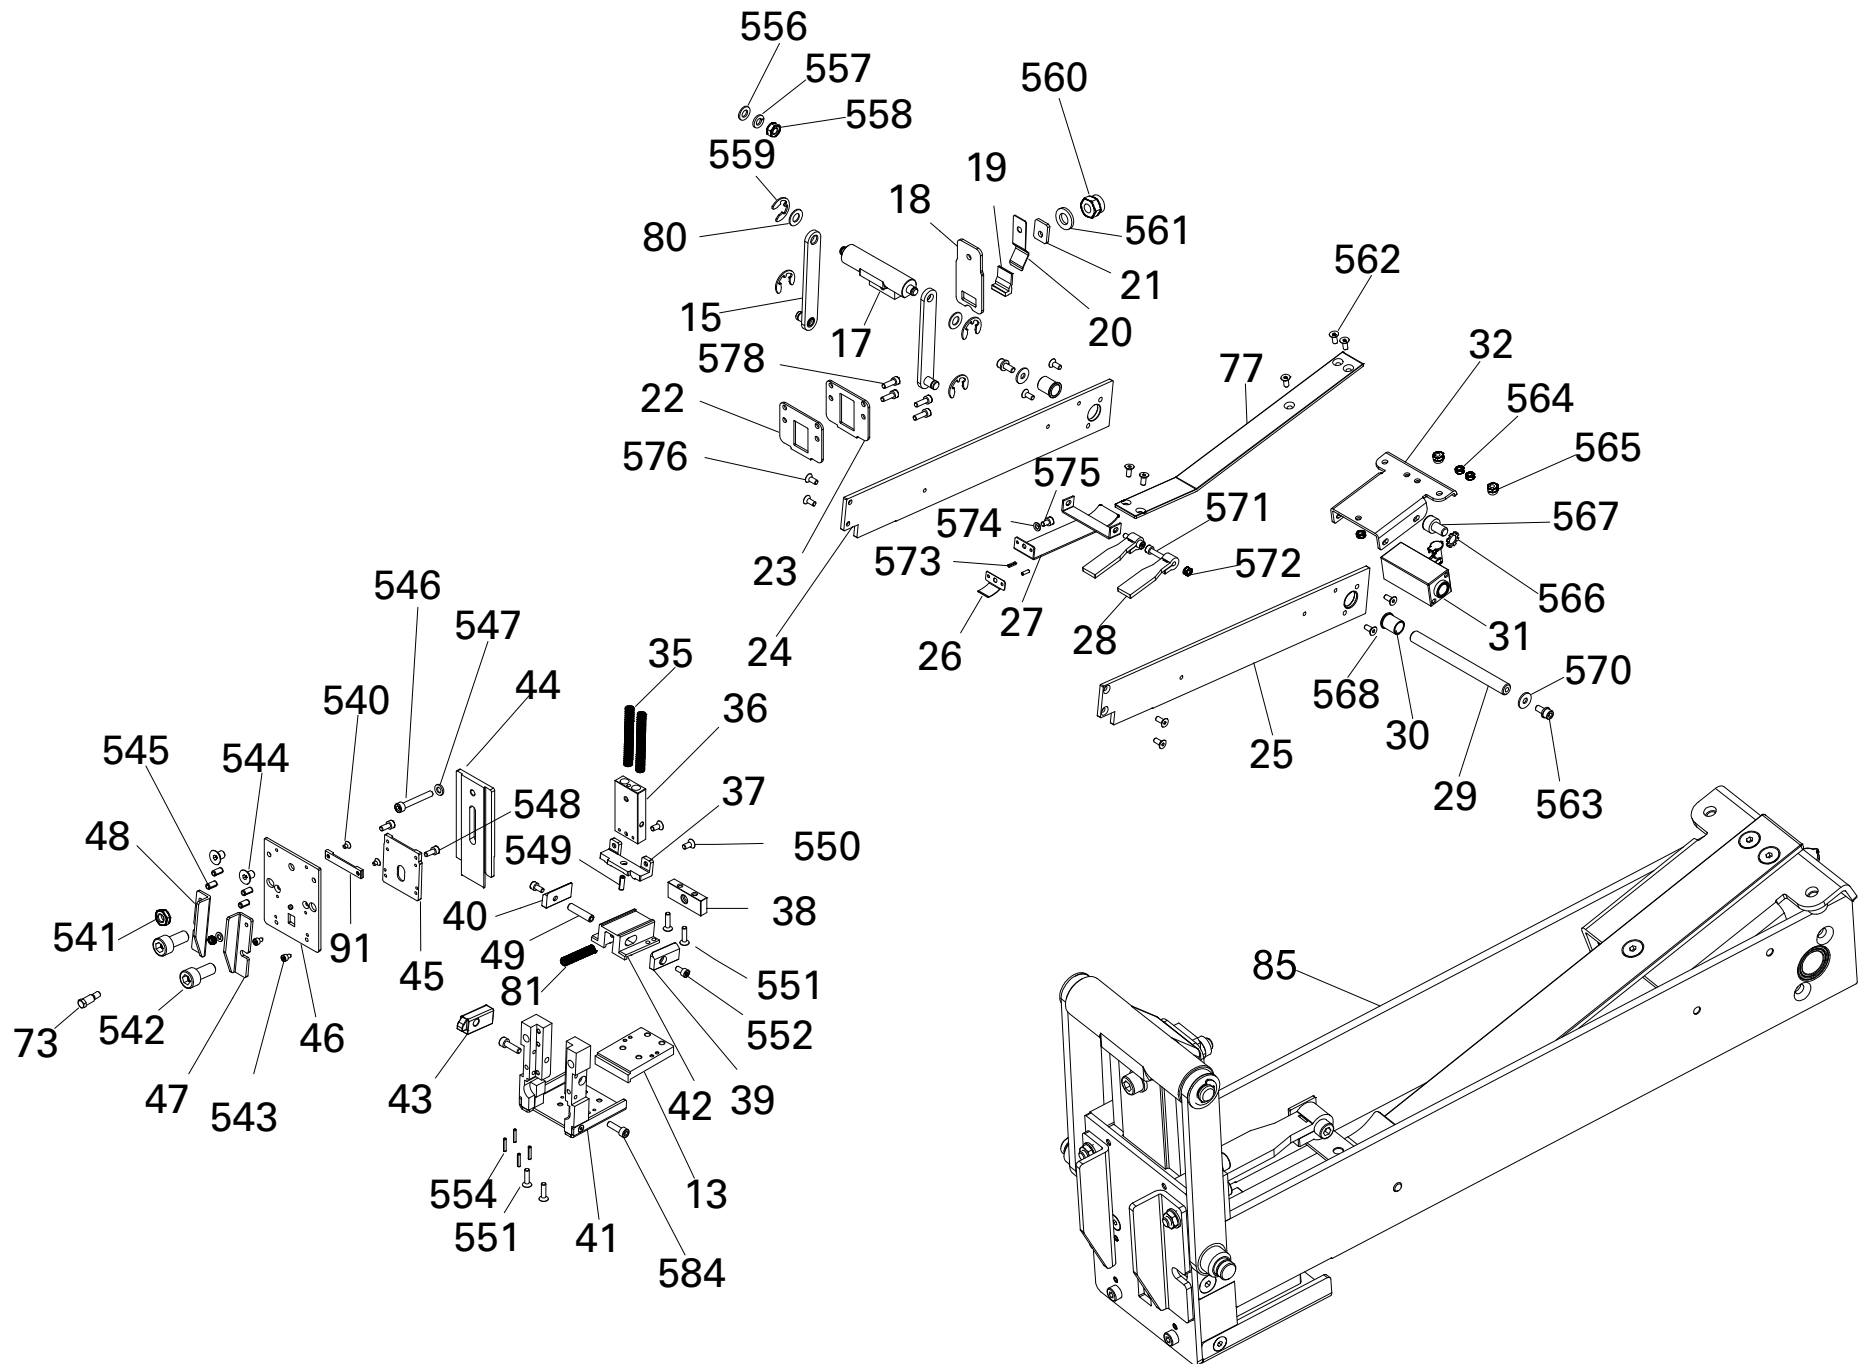

BOSTITCH

FC96 EC		Parts List:		IP1304-2RA	
To be Used with tool parts illustration:		IP1304-1RA			
and operation and maintenance manual:		189879			
Serial Number on the Tool:		000 and Higher			
ITEM	PART #	DESCRIPTION	ITEM	PART #	DESCRIPTION
1	9R195169	KIT, GUARD	63	9R195178	KIT, ROD END
2	9R195170	KIT, GUARD ATTACHMENT	64	9R193774	FOOT PEDAL
3	9R195171	KIT, CLINCHER HEADPOST	65	9R193775	INNER, PEDAL
4	9R195172	KIT, PEDDLE SWITCH	66	9R193776	SHAFT
5	9R193715	BACK COVER	67	9R193777	SLEEVE, SHAFT
6	9R195173	KIT, FOOT GUARD	68	9R193778	SHAFT
7	9R193717	TORSION SPRG LEFT	69	9R193779	BASE MIX
8	9R193718	TORSION SPRG RIGHT	70	9R195179	KIT, CONTROLLER BRKT
9	9R195174	KIT, RETURN SPRG	71	9R193781	BASE SUPPORT
10	9R193720	LEFT ARM	72	9R193782	COVER PLATE
11	9R193721	RIGHT ARM	73	9R193783	STOP, BOLT
12	9R193722	SPACING RING (OUTER)	74	9R193784	SIDE COVER
13	9R193723	BLOCK	75	9R193785	TRANSMISSION ROD
14	9R193724	SPACING RING (INNER)	76	9R195180	KIT, CONTROLLER
15	9R193725	LINK, STAPLE HD	77	9R193787	NAIL TRACK
17	9R193727	HEAD, STAPLE	78	9R193788	SPACING RING
18	9R193728	POSITIONING PLATE	79	9R195161	KIT, MOTOR
19	9R193729	POSITIONING BLOCK	80	9R193790	WASHER
20	9R193730	SPRING, FLAT	81	9R193791	SPRG, PUSHER
21	9R193731	SPACER	82	9R195162	KIT, CONT COVER
22	9R193732	PLATE, OUTER	83	9R193906	KIT, PIN
23	9R193733	PLATE INNER	85	9R193907	KIT, HEAD ASSEMBLY
24	9R193734	LEFT SIDE	86	9R193908	KIT, MICRO SWITCH
25	9R193735	RIGHT SIDE	87	9R193798	POSITIONING BLOCK
26	9R193736	GUIDE, STAPLE BELT	89	9R193800	FIXED PLATE
27	9R193737	STAPLE GUIDE	90	9R193801	SIDE COVER
28	9R193738	WOOL FELT	91	9R193802	GUIDE, DRIVER BRKT
29	9R193739	SHAFT	93	9R193804	COVER (SWITCH)
30	9R193740	BUSHING, SHAFT	96	9R193807	COVER, PLATE
31	9R193741	PIVOT BUSHING	97	9R193808	WRENCH RACK
32	9R193742	NAIL RAIL CHASSIS	98	9R193809	SLEEVE, SHAFT
33	9R195175	KIT, FOOT PAD	99	9R193810	TORSION SHAFT
34	9R195176	KIT, ON-OFF SWITCH	100	9R193811	BRCKT, SENSOR
35	9R193745	SPRG, COMPRESSION	101	9R193812	ADJUSTABLE PLATE
36	9R193746	SPRG, GUIDE BLOCK	102	9R193744	NAIL FRAME
37	9R193747	NAIL GUIDE PLATE	103	9R193743	SHAFT, NAIL FRAME
38	9R193748	POSITIONING BLOCK	105	9R193765	PLATE, GUIDE
39	9R193749	PUSH NAIL BLOCK B	503	9R193815	SHCS CAP SCREW
40	9R193750	PUSH NAIL BLOCK C	504	9R193816	SPRG WASHER
41	9R193751	ANVIL BASE	508	9R193820	SHCS CAP SCREW
42	9R193752	GUIDE, FEEDER	509	9R193821	SHCS CAP SCREW
43	9R193753	PUSH NAIL BLOCK A	513	9R193825	HEX NUT
44	9R193754	PUSHER, FEEDER	514	9R193826	REDUCER
45	9R193755	GUIDE, DRIVER	517	9R193830	SHCS CAP SCREW
46	9R193756	COVER PLATE	518	9R193831	FLT WASHER
47	9R193757	RIGHT BRKT	519	9R193832	SPRG PIN
48	9R193758	LEFT BRKT	520	9R193833	SHCS CAP SCREW
49	9R193759	PUSH NAIL SHAFT	523	9R193836	SELF LOCKING NUT
50	9R193760	CLINCHER	526	9R193839	SHCS CAP SCREW
51	9R193761	FIXED CLINCHER PLATE	527	9R193840	RETAINER RING
52	9R193762	SCREW, ADJMT	528	9R193841	RETAINER RING
53	9R193763	CLINCHER BASE	529	9R193842	FLT WASHER
54	9R193764	BOLT, PIVOT	530	9R193843	HEX HD BOLT
55	9R195177	KIT, CLUTCH	531	9R193844	FLT WASHER
57	9R193767	SHAFT, PIN	532	9R193845	SHCS CAP SCREW
58	9R193768	SHAFT, PIN	533	9R193846	LK WASHER
59	9R193769	UPPER CLINCHER POST	534	9R193847	SPRG PIN
60	9R193770	LOWER CLINCHER POST	537	9R193850	HEX NUT
61	9R193771	SWITCH PLATE			
62	9R193772	SPRG, PEDAL			

FC96 EC**Parts List: IP1304-2RA**

To be Used with tool parts illustration: IP1304-1RA
and operation and maintenance manual: 189879

Serial Number on the Tool:**000 and Higher**

ITEM	PART #	DESCRIPTION	ITEM	PART #	DESCRIPTION
538	9R193851	SET SCREW	598	9R193911	HEX HEAD BOLTS
539	9R193852	SHCS CAP SCREW	599	9R193912	SPRG WASHER
540	9R193853	FLT HEAD CAP SCREW	602	9R193915	HEX NUT
541	9R193854	SELF LOCKING NUT	603	9R193916	CORD, POWER (EU)
542	9R193855	SHCS CAP SCREW	603	9R193917	CORD, POWER (USA)
543	9R193856	SHCS CAP SCREW	604	9R193918	HARNESS, SWITCH
544	9R193857	FLT HEAD CAP SCREW	605	9R193921	HARNESS, MOTOR
545	9R193858	SPRG PIN	608	9R193924	HARNESS FITTING
546	9R193859	SHCS CAP SCREW	609	9R193925	HARNESS FITTING
547	9R193860	FLT WASHER	610	9R193926	SHCS CAP SCREW
548	9R193861	SHCS CAP SCREW	613	9R193929	SHCS CAP SCREW
549	9R193862	SPRG PIN	616	9R195156	TUBE, NYLN, SWITCH
550	9R193863	FLT HEAD CAP SCREW	617	9R195157	TUBE, NYLN, MOTOR
551	9R193864	FLT HEAD CAP SCREW	618	9R195158	TUBE, NYLN, MICRO SW
552	9R193865	SHCS CAP SCREW	619	9R195159	TUBE, NYLN, SENSOR
553	9R193866	POST, SPRG	620	9R195160	TUBE, NYLN, CLUTCH
554	9R193867	SPRG PIN	623	9R195163	CABLE GLAND
555	9R193868	HEX HEAD BOLTS	624	9R195167	NYLON WAVE TUBE
556	9R193869	FLT WASHER	625	9R195168	BHCS CAP SCREW
557	9R193870	SPRG WASHER	626	9R195164	LABEL, SHOCK
558	9R193871	SELF LOCKING NUT	627	9R195165	LABEL, WARNING
559	9R193872	RETAINER RING E	628	9R195166	LABEL IDENTIFICATION
560	9R193873	SELF LOCKING NUT			
561	9R193874	FLT WASHER			
562	9R193875	FLT HEAD CAP SCREW			
563	9R193876	SHCS CAP SCREW			
564	9R193877	SELF LOCKING NUT			
565	9R193878	SELF LOCKING NUT			
566	9R193879	LOCK WASHER			
567	9R193880	SHCS CAP SCREW			
568	9R193881	FLT HEAD CAP SCREW			
569	9R193882	HEX NUT			
570	9R193883	FLT WASHER			
571	9R193884	SHCS CAP SCREW			
572	9R193885	HEX NUT			
573	9R193886	SPRG TIP			
574	9R193887	SPRG WASHER			
575	9R193888	SHCS CAP SCREW			
576	9R193889	FLT HEAD CAP SCREW			
577	9R193890	HEX NUT			
578	9R193891	SHCS CAP SCREW			
579	9R193892	SHCS CAP SCREW			
580	9R193893	HARNESS BUSHING			
584	9R193897	SHCS CAP SCREW			
585	9R193898	ROUND CROSS SCREW			
586	9R193899	SENSOR			
591	9R193904	HARNESS FITTING			
592	9R193905	SHCS CAP SCREW			